

Grab Wedge Technology



BiTite® Blanking Peg

15mm	HEP44.15
18mm	HEP44.18
22mm	HEP44.22
28mm	HEP46.28

Alterations Blanking a fitting is easy with Hep₂O®


Demountable Hep₂O®

Remove the cap and BiTite® grab wedge from the fitting. Push the open end of the blanking peg into the 'O' ring. Replace the cap hand tight.

Note: Stainless steel blanking caps will not work correctly in Hep₂O® fittings with BiTite® grab wedges inside.

Removing the Blanking Peg

Remove the cap and blanking peg, re-insert the 'O' ring and wedge support ring (if applicable) - check the grab wedge is undamaged. Insert the grab wedge into the fitting with the flat face against the wedge support ring. Replace the cap hand tight.

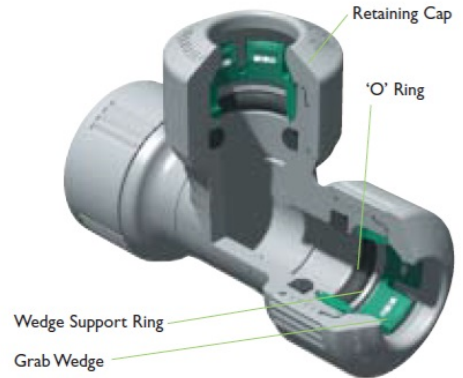

Grab Ring Technology

Blanking Caps



- PB40. 15
- PB40. 18
- PB40. 22
- PB40. 28



Demountable Fittings



A unique feature of the Hep₂O fitting is its ability to be demounted to facilitate easy alteration or adjustment to the installation. In addition all fittings may be temporarily capped off for future use or testing.



Important:

Once used, a grab ring should never be reused again as its ability to grip the pipe may have been reduced due to damage caused on removal.